


# FC Touch instruction manual

## SPECIFICATIONS:


Dimension	148.5mm*42.5mm*64.5mm(5.25" Bay)
Screen dimension	118mm*31.5mm
Power Output	Up to 30 watts per channel
Control Channel	6 Channels
Color Available	Black Anodized/Silver
DC Input	+ 12V(Standard 4- Pin Connector)
DC Output	0V- 12V DC
Fan Connectors	Six 3 pin connectors

## INSTALLATION:

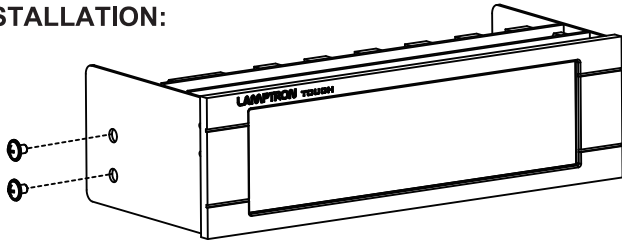

**Tools required:** Phillips head screwdriver  
Mount the product into a 5.25 inch drive bay of your computer chassis using the screws in the accessory bag.

## CONNECTIONS:

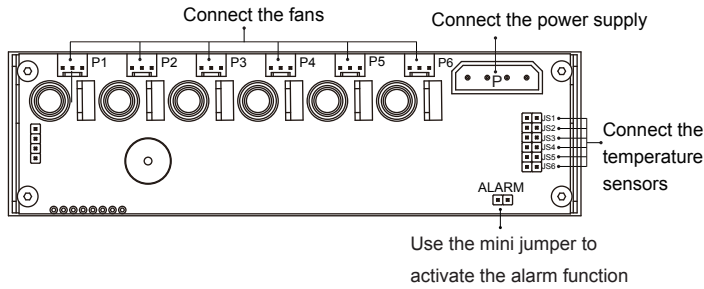


### 1. Connect the fans

- P1: Connect the first channel fan
- P2: Connect the second channel fan
- P3: Connect the third channel fan
- P4: Connect the fourth channel fan
- P5: Connect the fifth channel fan
- P6: Connect the sixth channel fan
- P: Connect the power supply

### 2. Connect the temperature sensors

- JS1: Connect the first channel temperature sensor
- JS2: Connect the second channel temperature sensor
- JS3: Connect the third channel temperature sensor
- JS4: Connect the fourth channel temperature sensor
- JS5: Connect the fifth channel temperature sensor
- JS6: Connect the sixth channel temperature sensor
- ALARM: Use the mini jumper to activate the alarm function

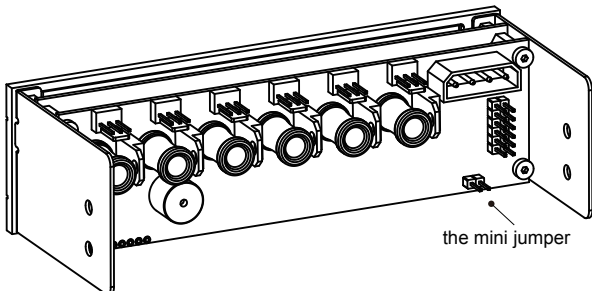

### NOTE:


In order to protect your computer the device has the alarm function. If the temperature exceeds 70 degrees Celsius, the unit will be

emitting noise. If the fans are not operating when the voltage is over 6.5v, the unit will be emitting noise. Insert the mini jumper to enable alarm function or remove it to disable the alarm function


## ACCESSORIES:



## OPERATION:

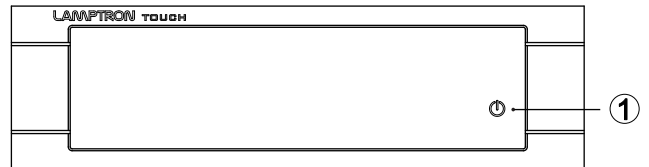

## THE MAIN INTERFACE

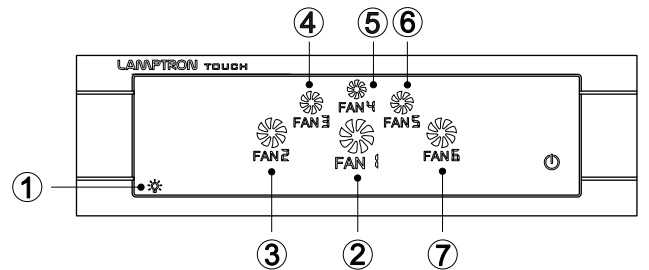

- ① The light bulb button: The light bulb button adjust the brightness of the screen. There are three settings for the brightness. (If the light bulb button is not being used, it will disappear in 6 seconds)
- ② The fan 1 button: Touch it to enter the fan 1 branch interface
- ③ The fan 2 button: Touch it to enter the fan 2 branch interface
- ④ The fan 3 button: Touch it to enter the fan 3 branch interface
- ⑤ The fan 4 button: Touch it to enter the fan 4 branch interface
- ⑥ The fan 5 button: Touch it to enter the fan 5 branch interface
- ⑦ The fan 6 button: Touch it to enter the fan 6 branch interface